

# EazyRizer

## **BIG BLUE Assembly & Instruction Sheets**

1. Remove all packaging and check contents, now take the lifting pillar **FIG C** and after removing the screw-shaft assembly assemble it with base **FIG B** using the six **M10 x 35** bolts and tighten them to **40 ft Ib**.
2. Turn upside down and fit the two wheel assemblies as shown in the diagram **FIG 12** tightening the bolts until resistance is felt then back off a quarter of a turn until the wheel is free to turn
3. With the lift in the normal position take the lifting arm **FIG A** and remove the two outer guide bolts and fittings, now using a small amount of grease (**supplied**) fit the **8** nylon guides **FIG 9** into their respective holes from the inside.
4. Place the lifting arm onto the pillar and re-fit the two outer guides tightening all four bolts to **40 Ib ft** and check that the lifting arm is free to move up and down the lift.
5. Take the screw-shaft assembly and after greasing the bearing **FIG 3** re-fit it to the lift as shown in the diagram, be sure to locate the large rubber buffer **FIG 5** before screwing it through the bronze lifting nut in the arm **FIG A**.
6. Continue screwing the shaft until it travels through the base plate and fit the nylon bush, small rubber buffer and 14mm washer as shown **FIG's 4/6/7** and finally the split pin **FIG 8**.
7. Assembly is now complete, lubricate the entire length of the shaft with the grease and with your power drill run the machine up & down several times. The lift is now ready to use.

## PRE-ASSEMBLY CHECK LIST

- |                               |     |
|-------------------------------|-----|
| 1. Drive adaptor.             | x 1 |
| 2. 22mm socket (not supplied) |     |
| 3. Bearing race.              | x 1 |
| 4. Nylon bush.                | x 2 |
| 5. Large buffer.              | x 1 |
| 6. Small buffer.              | x 1 |
| 7. 14mm washer.               | x 1 |
| 8. Split pin.                 | x 1 |
| 9. Nylon guides.              | x 8 |
| 10. Nylon guides.             | x 4 |
| 11. Steel spacers.            | x 4 |
| 12. Wheel assy.               | x 2 |

- |                      |     |
|----------------------|-----|
| A. Lifting arm.      | x 1 |
| B. Base.             | x 1 |
| C. Lifting pillar.   | x 1 |
| D. Screw shaft assy. | x 1 |

